

Step 5: Realign the Bluetooth During a Recording

If you have set-up the Swivl in the back of your classroom, there may be a point during your recording when the Swivl stops following you. This may be due to a person or an object blocking the bluetooth device from the Swivl. You may see it freeze in one direction when you are in another location. See example below.



To troubleshoot this problem follow the steps below:

1. First, remove the object that is obstructing the connection, or move the tripod to a new location.
2. Once you either remove the object or move the tripod, stand in front of the Swivl and point the bluetooth device back at the front of the Swivl. Wait for the Swivl to respond to your motion by slightly adjusting itself to face the bluetooth device.



3. The Swivl will now follow your motion again as you move around the classroom.